



Using the Pressure Washer

1. Wear protective equipment including goggles and waterproof overalls.
2. Hold the lance in both hands when squeezing the trigger because the water pressure will make it "kick back".
3. Do not aim the water jet at yourself, any other persons, or any animals. It will cause an injury.
4. Do not spray the water jet over any electrical equipment. This could cause a short circuit and fire. This could cause a fatal electric shock.
5. If the cable is cut or damaged in any way, dry your hands switch off and unplug at the mains before inspecting it. If the cable attached to the pressure washer is damaged, stop using the equipment. Contact the hire company. If an extension cable has been damaged do not use it again.
6. If you suspect there is a fault in the electricity supply to the socket, do not attempt to repair it. Contact a competent electrician.
7. Take care not to accidentally pull the plug from the socket.
8. Switch off and remove the plug from the socket before leaving the machine unattended.
9. Do not connect or disconnect a pressure hose or lance while the washer is pressurised. Turn off the water pump motor, and squeeze the lance trigger to release the pressure.
10. Switch off the washer at the mains and squeeze the lance trigger to release the pressure when not in use.
11. If working in cold conditions, make sure that the water in the machine will not start to freeze when not in use.
12. After work turn the detergent off or remove the detergent feed. Run the washer on just water to flush the detergent out. Then turn off the water pump motor, and squeeze the lance trigger to release the pressure. Dry hands, switch off at the mains and unplug the washer.
13. Drain the machine if there is any danger of overnight frost.
14. Make sure that all the water filters are cleaned and properly protected before storing the machine.
15. If the equipment does not work properly do not attempt to repair it. Contact the hire company.

Keep this leaflet safe as it may be required for reference at a future date



Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

1. Use a residual current device (RCD) plugged directly in to the 230 volt socket. Plug the equipment into the RCD. This will help to protect you against electric shock if the cable or equipment gets damaged.
2. Use the "TEST" button to check that the RCD is working each time you use it. Reset the RCD according to the instructions supplied with it.
3. If you need to use an extension cable, follow any special instructions given by the hire company. If instructions, you should only use a suitably rated heavy-duty extension cable with a splash proof socket, not longer than 50 metres (160 feet). Plug it directly into the RCD.
4. Lay the extension cable out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. Unroll it fully or it will overheat and could catch fire.
5. Make sure that any extension cable connections are dry and safe.

