




Using the Pressure Washer

1. Wear protective equipment including goggles and waterproof overalls.
2. Hold the lance in both hands when squeezing the trigger because the water pressure will make it “kick back”.
3. Do not aim the water jet at yourself, any other persons, or any animals. It will cause an injury.
4. Do not spray the water jet over any electrical equipment. This could cause a short circuit and fire. This could cause a fatal electric shock.
5. Stop the engine before leaving the machine unattended.
6. Do not connect or disconnect a pressure hose or lance while the washer is pressurised. Stop the engine, and squeeze the lance trigger to release the pressure.
7. Stop the engine and squeeze the lance trigger to release the pressure when not in use.
8. If working in cold conditions, make sure that the water in the machine will not start to freeze when not in use.
9. After work turn the detergent off or remove the detergent feed. Run the washer on just water to flush the detergent out. Then stop the engine, and squeeze the lance trigger to release the pressure.
10. Drain the machine if there is any danger, of overnight frost.
11. Make sure that all the water filters are cleaned and properly protected before you store the machine.
12. If the equipment does not work properly, do not attempt to repair it. Contact the hire company.

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment

It is important to read all of this leaflet BEFORE you use the Pressure Washer

1. Diesel fuel is highly flammable. Take care not to cause a fire or explosion.
2. This pressure washer is designed for high pressure water washing.
3. The action of this pressure washer can cause injury or damage if the equipment is not used in a careful and controlled way.
4. Familiarise yourself with how the equipment works before starting work.
5. Think ahead to make sure you will always be working safely.
6. You should have at least the following items of personal protective equipment
Impact resistant visor or goggles:
Ear muffs or plugs giving protection for levels up to 88 dB(A)
Waterproof overalls
Waterproof boots
Waterproof gloves
7. This equipment must not be used by minors. Or by anyone under the influence of drugs or alcohol.
8. This pressure washer is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.

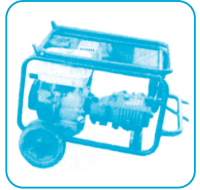

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE



5. Check the throttle lever is in the IDLE position.
6. Do not wear gloves when you start the engine. Also, make sure that you have no loose clothing or flapping sleeves that could get caught.
7. Fit the starting handle to the shaft, and check by turning it anti-clockwise that the ratchet mechanism works. Check also that the handle slides on and off the shaft easily.
8. Move the decompression valve lever into the decompression position.
9. If the engine is fitted with a cold start button, press it in when starting from cold.
10. Grasp the starting handle firmly in one hand – but do not wrap your thumb around the handle. Keep it on the same side as your fingers – this is very important. Your thumb could be broken if you wrap it around the handle, and the engine kicks back.
11. Crank the engine strongly before lowering the decompression lever smoothly the engine should fire up. If it doesn't, go through the steps again from instruction 7 above.
12. If the engine is now running, slide the handle off the shaft.
13. If you let go of the handle when the engine fires up, do not try to grab it. Stop the engine using the stop control. Then start the engine again.
14. Never stop the engine using the decompression lever. This may damage the engine and will be regarded as misuse by the hire company. Only use the proper RUN/STOP control.
1. No smoking.
2. Stop the engine and let it cool down.
3. If possible, move the machine away from the work area.
4. Clean the filter cap and the area around it to prevent dirt falling into the fuel tank.
5. Use a funnel and clean petrol when refuelling. Do not spill any fuel on yourself or the machine.
6. Wipe any fuel off the machine. Dispose of fuel soaked cloth carefully.
7. If any fuel is spill on the ground, wipe it up or cover it with soil.
8. If any fuel is spill on your clothes, change them straight away.
9. Put all fuel caps back on properly, and move your fuel can to a safe cool place.
1. This section describes the starting procedure for most diesel engines.
2. If the hire company has given you special instructions, follow them. Otherwise, follow the instructions given below.
3. Check the oil and fuel levels before you try to start the engine.
4. Move the STOP control to the RUN position.

STARTING THE ENGINE

REFUELLING

1. Do not use this pressure washer where there is a danger of explosion. It will ignite fumes from petrol, or gas cylinders.
2. Using this equipment indoors or in confined spaces could cause fatal carbon monoxide poisoning. Never use it in domestic premises and only use it in other indoor situations if its suitability and the ventilation required has been fully assessed. Mechanical extraction ventilation will almost always be required.
3. Make sure that the area is clear and safer and that no-one is near to distract you. Protect other people from the noise and water spray. Use a wash bay, or erect barriers. Make sure there is good drainage for the waste water.
5. Set up the work area so that there is no danger of water being sprayed onto any electricity supply socket.
- OPERATORS
1. The following items of personal protective equipment (PPE) are the minimum that should be worn whenever you use this pressure washer. Particular jobs or environments may require a higher level of protection. You must wear an impact resistance visor or goggles when working with this machine.
3. You should wear overalls, boots and gloves that are waterproof.
4. Anybody working near to you will also need to wear appropriate personal protective equipment.
1. Check your machine, engine, high pressure water hoses, and all equipment. If anything is found damaged, do not use the pressure washer – contact the hire company.
2. Use only the hose supplied with the machine. Ensure it is laid out safely with no kinks, away from where vehicles may run over it.
3. Extension hoses may have been supplied by the hire company. These allow you to site your machine further away to reduce noise.
4. Make sure that all the pressure hose connections are firm and tight.
5. Make sure that none of the hose connectors get dirty when you are setting-up the machine.
6. Make sure you understand all of the controls. Before you start the washer, you must know how to control it and stop it safely.
7. WATER SUPPLY
1. If your supply is from a water tank make sure the water is clean.
2. You must use a suitable filter if you are in any doubt about how clean your water supply is.
3. If using chemicals or detergents, follow the instructions supplied with them. Use only the recommended detergent recommended by the hire company.

PRESSURE WASHER

v112016